

## Control Panel Instructions

88.8



### Reset

When powering on for the 1<sup>st</sup> time, or if the display shows **E 10**, **E20** or **E60** hold **M** for 3 seconds until **rES** shows on the screen. The desk will reset both legs to the lowest position.

### Lifting

Press to raise and lower the desk

### Memory

Press **M** and then press **1** - **4** to save the current height to memory

### Setup Mode

Press **M** for 3 seconds until **S--** flashes on the display. Press **M** again to enter setup mode.

Use to scroll through the setup options, pressing **M** to select one of the following modes:

<b>Un</b> Units	<b>S</b> Displays height in cm   <b>I</b> displays height in inches
<b>br</b> Brightness	<b>L</b> Low, <b>N</b> Normal or <b>H</b> High screen brightness
<b>bEE</b> Beep	<b>OFF</b> or <b>On</b>
<b>CF</b> Collision Force	<b>OFF</b> , <b>L</b> Light, <b>N</b> Normal or <b>H</b> Heavy collision force detection
<b>SH</b> Set Height	<b>0</b> Original height after RESET   Program <b>H</b> High & <b>L</b> Low height limits
<b>Sn</b> Serial Number	Scrolls in display window
<b>dE</b> Demo	(Mode disabled)

### Error Codes

<b>Hot</b> Overheat Alert	Let unit cool down
<b>E02</b> Collision / Tilt	Eliminate cause of collision, tilt or vibration   Press any key to clear   RESET
<b>E 10</b> Motor Error	Check all cables and connections   Power OFF/ON   RESET
<b>E20</b> Overload	Remove heavy objects from desktop   Power OFF/ON   RESET
<b>E31</b> Low Voltage	Power OFF/ON, RESET
<b>E32</b> High Voltage	Power OFF/ON, RESET
<b>E60</b> Sync Error	Check all cables and connections for both motors   Power OFF/ON   RESET